

## Updating your PC to the latest NAV-Link drivers

*Your NAV-Link has been updated to the latest 1.6 firmware. This requires your PC to be updated to the latest 1.6 drivers. If you have not already installed the 1.6 drivers, please follow the direction below:*

In order to complete the following procedures, you may need Windows administrator privileges. Please see your system administrator if you do not currently have a login account which provides you with administrative privileges.

### Verify whether your PC is currently updated to v1.6

1. From the main menu click **All Programs**.
2. Search for one of the following programs:
  - a. **NAVCom-NavLink**: This means your driver is at v1.6 and if you want to upgrade to the latest version, then follow the instructions below and uninstall/reinstall the latest 1.6 drivers under **“Download / Install Latest v1.6 Drivers”**.
  - b. **Movimento**: This means your driver is at v1.5 and needs to be updated
  - c. Both **NAVCom-NavLink** and **Movimento** appear in the All Programs list: This means you did not uninstall previous drivers. You will need to uninstall **both** and re-install v1.6.


### Uninstall Previous Drivers

1. Press the Start button and click on Control Panel.
2. Once in Control Panel, click on Add or Remove Programs. If using a version of Windows later than Windows XP, click on Programs and Features.
3. Find and click the “Puma” program in the list and press its remove button. If using a version of Windows later than Windows XP, click on the Uninstall button. If you do not find the “Puma” program, skip step 4 and proceed to **Download / Install Latest v1.6 Drivers**
4. If the uninstall process prompts, “All devices using this driver will be removed. Do you wish to continue?” press yes.


### Download / Install Latest v1.6 Drivers

1. If you do not have the latest 1.6 NAV-Link and NAVCoM PC Drivers for Win7 and XP, download it from [http://www.movimentodl.com/cgi-bin/home/generic\\_select.pl](http://www.movimentodl.com/cgi-bin/home/generic_select.pl)
2. If you have your NAVCoM / NAV-Link connected to your PC, disconnect it now.
3. Double click on the downloaded file. You will see a folder named “delivery”. Double click, then select the “pc” directory and open “pc”.


4. Run the installer by double clicking on NAVCoM-NavLinkInstaller.exe. You will see the following screen:

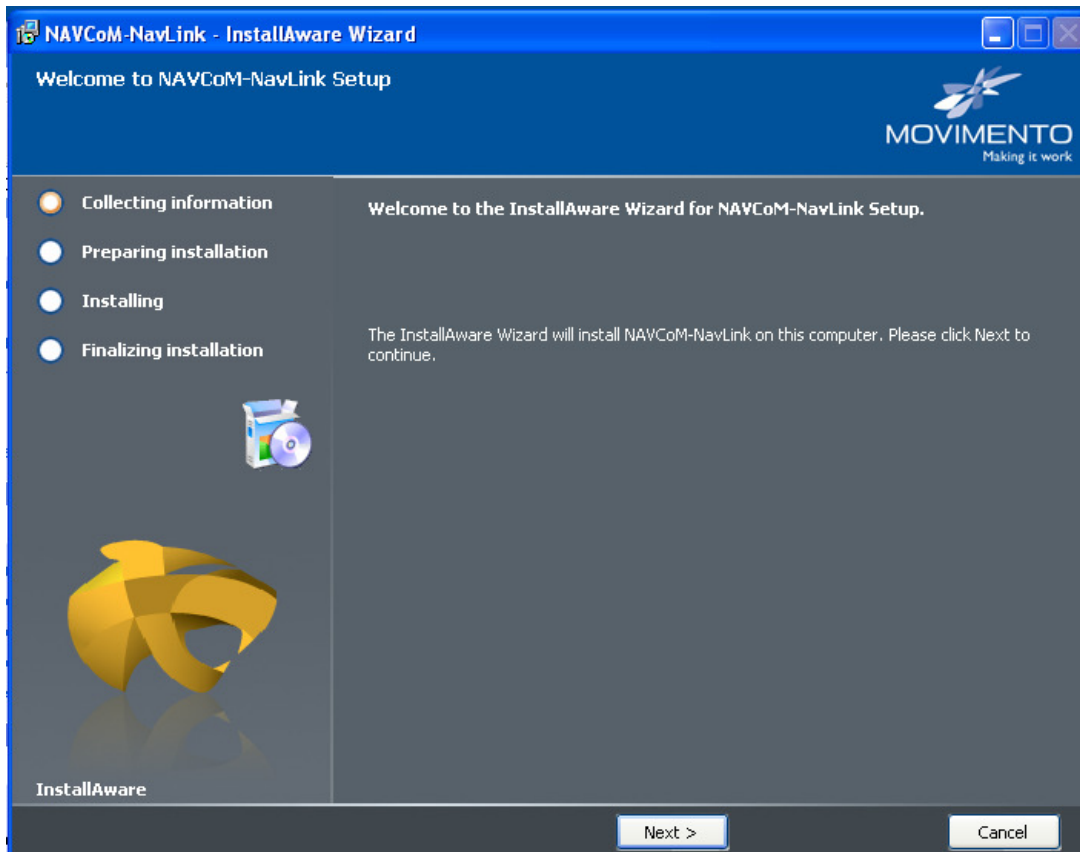


5. Select Next. You will see the license agreement:

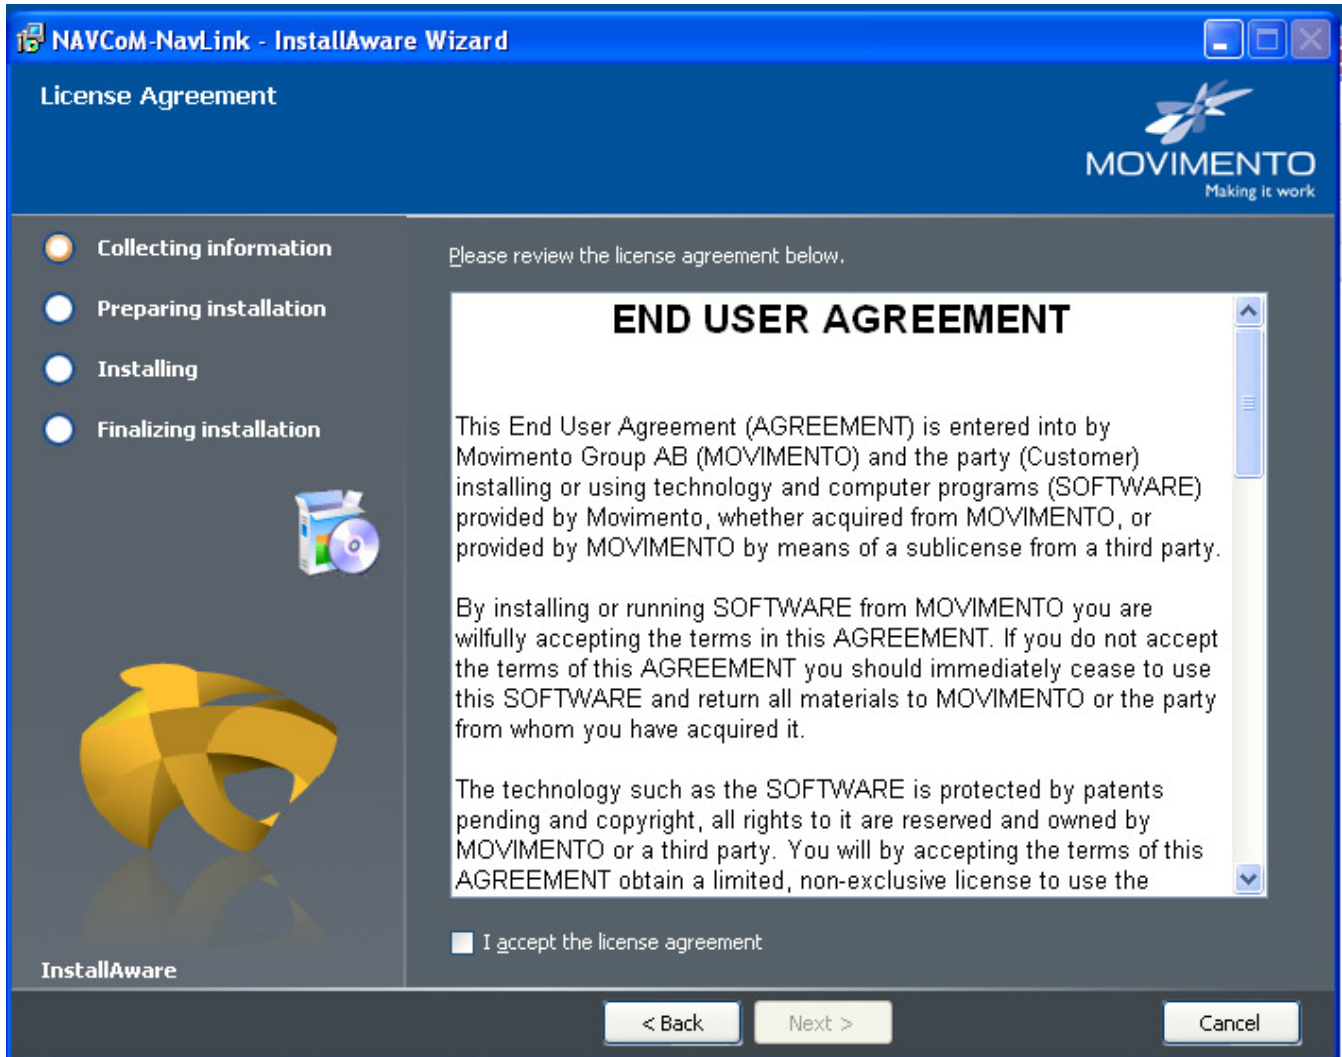

6. If you agree with the License Agreement, select “**I Accept the license agreement**”, and select **Next**.

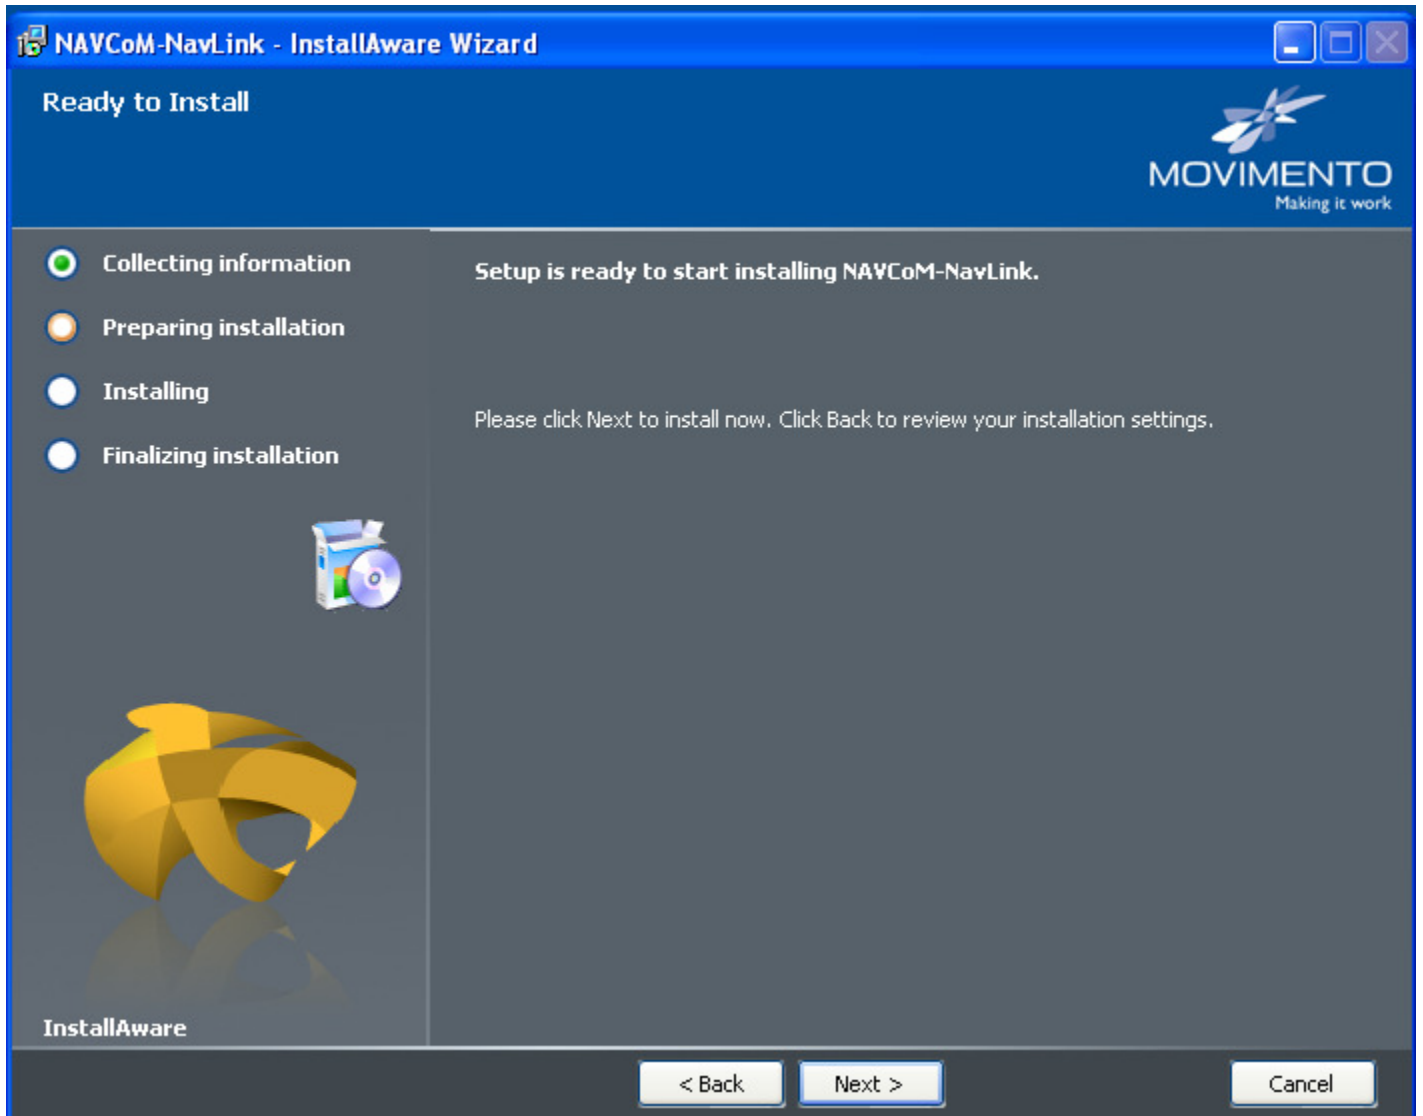

7. The drivers will begin to install. Approve the installation for any additional windows that pop up. When installation is complete, you should see the following screen:

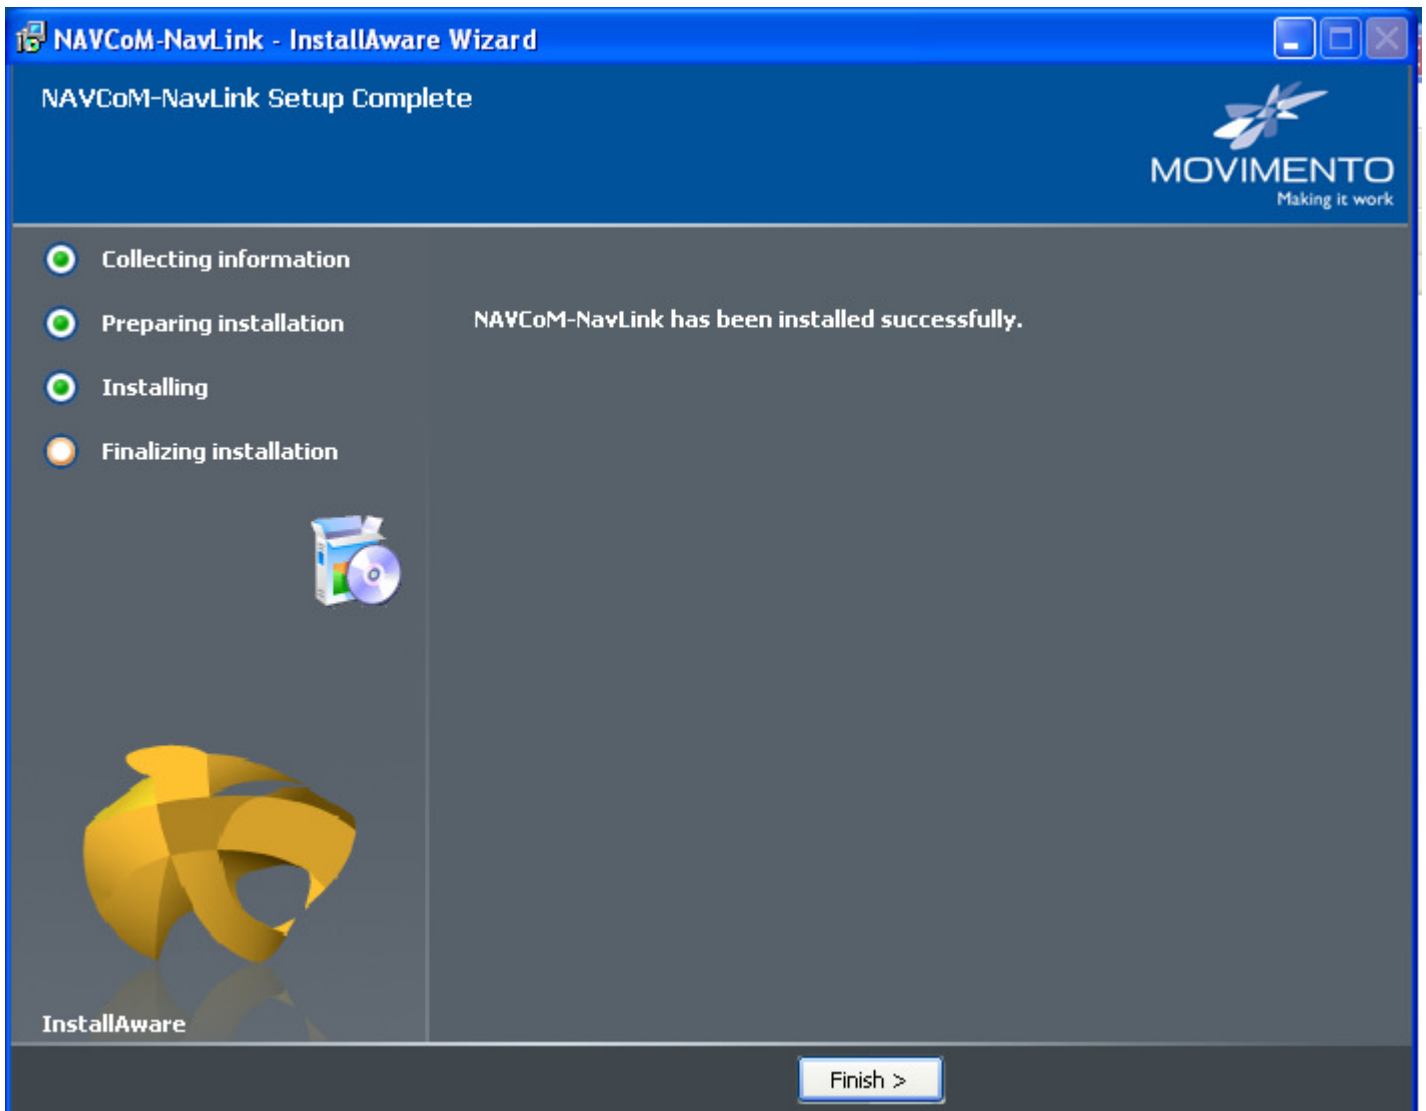

8. Select **Finish**. You have now installed the v1.6 NAVCoM / NAV-Link drivers.
9. Now Plug your NAVCoM / NAV-Link into your PC. **You should see the USB pop up for the new hardware found and the drivers will install automatically with no user intervention. Installing on all USB ports is not required with this driver release as this is also done automatically.**